

# InRoads

## *Global Scale Factors*

**Did you know** that when you cut new cross sections or profiles your global scale factors need to be set in order for the text, cells and linestyles to display properly. This is an application add-in found under InRoads > Tools > Global Scale factor. The factors need to correspond to your desired plot scale.