

InRoads

Station Lock

Did you know that the InRoads Locks toolbar contains the Station Lock which locks you onto even stations in the event that the alignment you are using does not start on an even station? The station will be determined by the interval you are using. For example, if you are stationing an alignment at a 100 ft interval, the display will show even 100 ft. stations. This affects not only station displays but virtually everything that uses a station interval, such as cross sections, profiles and roadway modeling. For more information about all the InRoads Locks see Page 25 of the training manual.