

MicroStation

Using AutoTrack

Did you know that if you have Autotrack loaded on your machine, the following workflow can be used...

1. Under AddOn's Launch AutoTrack
2. Should get dialog box and main AutoTrack toolbar.
3. Click on the truck to pick design vehicle.
4. Set Active level to place new path.
5. Click on AutoDrive icon.
6. Place vehicle in starting position and bearing.
7. Dialog box shows up, click on the icon with the red circle & number 5 to set speed or other properties.
8. Click Proceed when ready to set path. Click where you want the vehicle to move. Reset when finished (follow prompts).

Tip: Click on the icon with the pencil and the AutoTrack Path Edit toolbar opens. The icon on the far right allows you to delete last target point.

Tip from Jim Biren, R2