

CDOT Title Sheet Vicinity Map



This document defines the procedure for inserting a Vicinity Map into the Project Title Sheet.

Vicinity Map Insertion Procedure

Open the file JPC#TitleSheet.dgn under C:\Project\.....\Design\Drawings or JPC#ROWTitleSheet##.dgn under C:\Projects\.....\ROW_Survey\Drawings that has been created when you run the project create executable upon project startup.


Note: The 'JPC#' will be replaced by the 5 digit Job Project Code.

County Maps for all counties within Colorado have been translated from GIS information, and can be found on the Shared Drive [\\public\CADD County Maps\](#). These maps should be used to build your Vicinity Map. The County of interest should be copied down to your project location Drawings folder and can be attached as a reference file to the Title Map. The local map can be edited as desired without affecting the original.

Note: If you choose to attach the map directly from the Shared Drive as a reference file, the map will remain in a read-only state. No editing will be allowed nor will saving additional views be permitted.


The CDOT-PenTable.tbl has been updated to plot the title map with dithering on certain entities. It should be set by default. No adjustments will need to be made.

Title Map Example

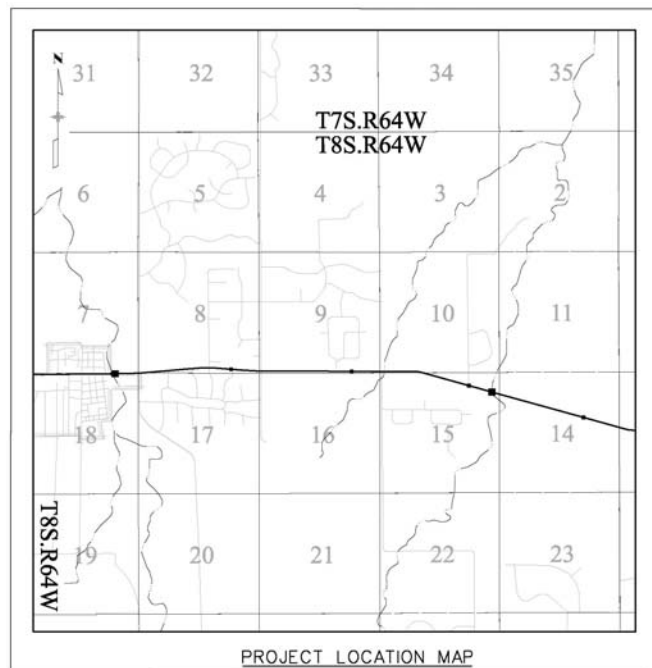


Reference File Attachment

The county map should be attached as a reference file to the Title Sheet. Once you have copied down your desired County to your Project location, open your Reference dialog box. Select **Attach** reference file, **Browse** to the file, and select **OK**.

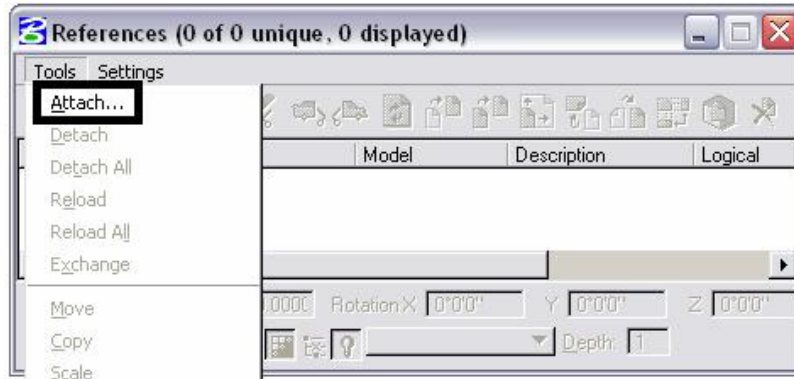


The **Reference Attachment Settings** box will appear. The Map has been designed to be inserted at a scale factor of 1:5280 (Master: Reference). It should be inserted with the Named View – *plan*, which you will see in the middle portion of the dialog box below. Additional or different named views can be saved to use for attachment purposes if desired in the Model file, but are not required.

CDOT Title Sheet Vicinity Map.pdf

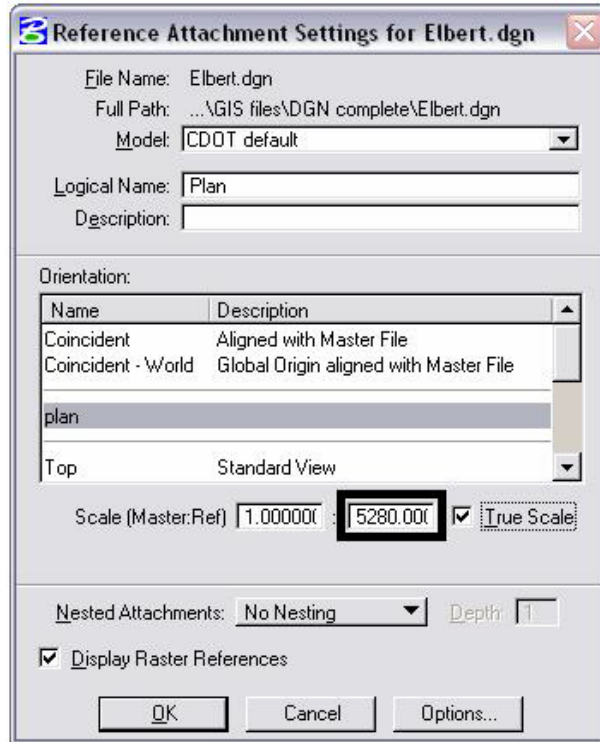

When you press the **OK** button, the map will be hung on the end of the cursor. Place the map within the limits of the Title Sheet drawing, Project Location Map area, located in the middle of the sheet. If the limits of your project are not shown within the area on the screen, you can zoom out in the view, place a large Fence Block, and perform a Reference File Clip Boundary command. This will re-clip the limits of the Reference File, allowing you to see much more of the map.

Note: Your Fence mode should be set to Block not to Element.

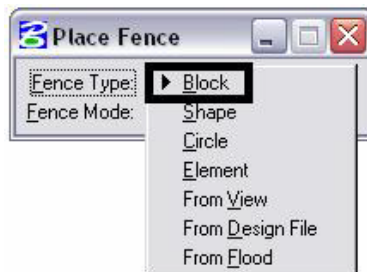


Once you have located your project, Zoom into the area where it is located. Reposition the project limits within the center the Title Sheet with the **Move** reference file command. Re-Clip the limits of the project as desired. This time you can use either a Fence mode Block or Element, which ever one you desire. If you are going to use element, select the Blue shape in the middle of the Title sheet and accept it on the screen. If you choose a Fence mode Block, Snap to

CDOT Title Sheet Vicinity Map.pdf

either corner of the Blue shape and accept it. This will re-define the limits of the Project Location Map.

A DGNLIB for the GIS levels has been included in the configuration and been assigned to all the County Model Files by default. The Reference Levels can be manipulated as desired from the Level Manager dialog box.

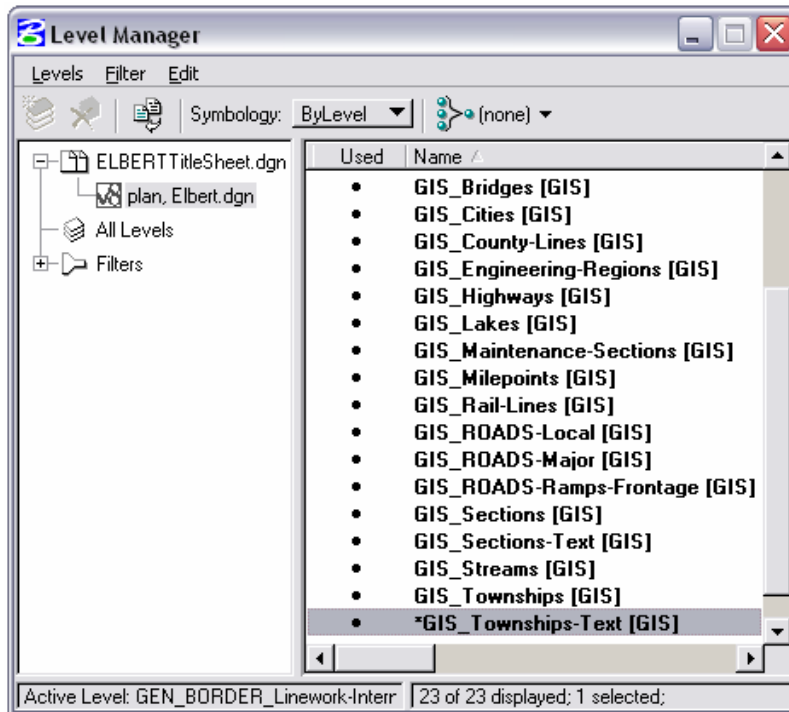

The Township and Range Text can be copied into your sheet and positioned where you want it. Turn off the Reference file GIS_Townships-Text level if you have copied it into your file.

Note: If you desire the map at a different scale than 1:5280 (1 inch = 1 mile) it can be rescaled through the reference dialog box. It should be noted that the linestyle scale factors and text were defined based on a 1 mile insertion. The linework and text can be re-scaled within the original Region area, only if it has been saved to your hard drive.